


CleanVue

Service Release Instructions

For cleaning and maintenance of Model XT and PX Door Systems

Tools Required:

- Release Tool (S28-0020)

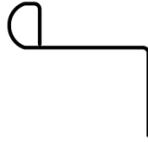


To facilitate cleaning and maintenance, the XT and PX Models are equipped with the CleanVue feature that enables the user, with the supplied release tool, to release pushbar/pushpad above the door face for cleaning and removal when needed. The release operation can be done without removing any parts, and it keeps the pushbar/pushpad retained during this operation preventing assembly errors that could compromise the performance of the system.

Please contact the factory if further assistance is required.

CleanVue Release Instructions

Latch Side
End Cap

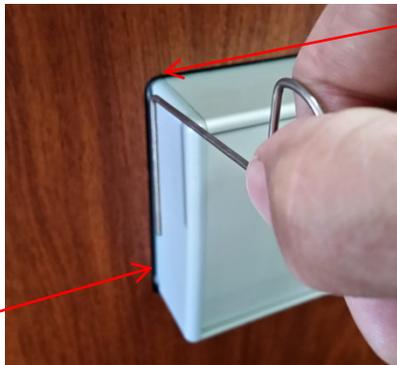


With the door latched, and with the pushbar/pushpad fully extended, Insert supplied Release Tool between the pocket cutout and top corner of the latch-side end cap.



Move the tool inward following the end cap. Once the tool clears the bottom of the end cap, move the tool sideways (approx. 3/8") away from where the tool was inserted. The tool will engage the Hold/Release link at this point.

Once in this position, press the tool straight in to actuate the release link. A slight inward push on the pushbar or pushpad will relieve the force required to release.


Tool Engaged in Hold/Release Link

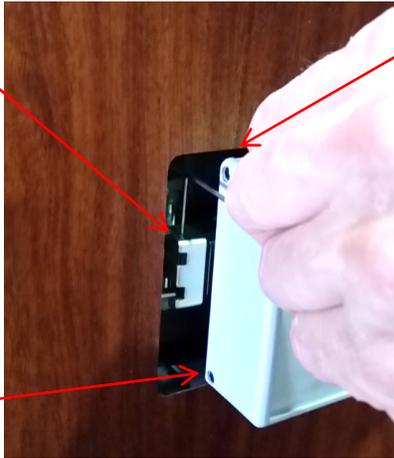

End Cap screw

Once released, the Pushbar/Pushpad will rise above the door face. In this position, the Pushpad/Pushbar can be moved from side to side while still being retained.

If the Pushbar/Pushpad needs to be removed, the four end caps screws will also be exposed in this mode.

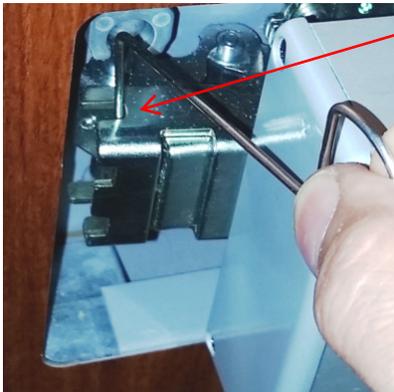

Close up view showing the release tool engaging the release link.



When complete, position the Pushbar/Pushpad over the pocket in the door face and push straight in. This re-enables the Hold/Release Link keeping the bottom of Pushbar/Pushpad below the door face.